



FESTO Sub-Base VMPAL

Sub-bases for MPA-L

Characteristics

Series: VMPAL

| Description | Article |
|--|----------|
| Sub-base VMPAL-AP-10 554311 | 12264667 |
| Sub-base VMPAL-AP-10-QS1/4"-1 560999 | 14164248 |
| Sub-base VMPAL-AP-10-QS1/4"-1-T1 561023 | 14164247 |
| Sub-base VMPAL-AP-10-QS1/4"-2 561000 | 14164255 |
| Sub-base VMPAL-AP-10-QS1/4"-2-T1 561024 | 14164254 |
| Sub-base VMPAL-AP-10-QS4-1 560994 | 14164251 |
| Sub-base VMPAL-AP-10-QS4-1-T1 561017 | 12265238 |
| Sub-base VMPAL-AP-10-QS4-2 560988 | 14164252 |
| Sub-base VMPAL-AP-10-QS4-2-T1 561018 | 12265239 |
| Sub-base VMPAL-AP-10-QS6-1 560987 | 14164246 |
| Sub-base VMPAL-AP-10-QS6-1-T1 561011 | 14164244 |
| Sub-base VMPAL-AP-10-QS6-2 560993 | 14164245 |
| Sub-base VMPAL-AP-10-QS6-2-T1 561012 | 12265237 |
| Sub-base VMPAL-AP-10-RV 8035230 | 14086224 |
| Sub-base VMPAL-AP-10-T1 554312 | 12264668 |
| Sub-base VMPAL-AP-10-T135 554315 | 12264670 |
| Sub-base VMPAL-AP-10-T135-RV 8035233 | 14086225 |
| Sub-base VMPAL-AP-10-T1-RV 8035231 | 14086226 |
| Sub-base VMPAL-AP-10-T35 554313 | 12264669 |
| Sub-base VMPAL-AP-10-T35-RV 8035232 | 14086228 |
| Sub-base VMPAL-AP-14 560973 | 13682683 |
| Sub-base VMPAL-AP-14-QS1/4"-1 561007 | 14164258 |
| Sub-base VMPAL-AP-14-QS1/4"-1-T1 561031 | 14164256 |
| Sub-base VMPAL-AP-14-QS1/4"-2 561008 | 14164271 |
| Sub-base VMPAL-AP-14-QS1/4"-2-T1 561032 | 14164269 |
| Sub-base VMPAL-AP-14-QS5/16"-1 561001 | 14164262 |
| Sub-base VMPAL-AP-14-QS5/16"-1-T1 561025 | 14164260 |
| Sub-base VMPAL-AP-14-QS5/16"-2 561002 | 14164275 |
| Sub-base VMPAL-AP-14-QS5/16"-2-T1 561026 | 14164273 |
| Sub-base VMPAL-AP-14-QS6-1 560995 | 14164259 |
| Sub-base VMPAL-AP-14-QS6-1-T1 561019 | 14164257 |
| Sub-base VMPAL-AP-14-QS6-2 560996 | 14164272 |
| Sub-base VMPAL-AP-14-QS6-2-T1 561020 | 14164270 |
| Sub-base VMPAL-AP-14-QS8-1 560989 | 14164263 |
| Sub-base VMPAL-AP-14-QS8-1-T1 561013 | 14164261 |
| Sub-base VMPAL-AP-14-QS8-2 560990 | 14525938 |
| Sub-base VMPAL-AP-14-QS8-2-T1 561014 | 14164274 |
| Sub-base VMPAL-AP-14-RV 8034557 | 14164234 |
| Sub-base VMPAL-AP-14-T1 560975 | 14164218 |
| Sub-base VMPAL-AP-14-T135 560979 | 14164216 |
| Sub-base VMPAL-AP-14-T135-RV 8034560 | 14164231 |
| Sub-base VMPAL-AP-14-T1-RV 8034558 | 14164233 |
| Sub-base VMPAL-AP-14-T35 560977 | 14164217 |

Disclaimer: The content of this document has been composed with the utmost care. However, it is possible that certain information changes over time, becomes inaccurate or incomplete. ERIKS does not guarantee that the information provided on this document is up to date, accurate and complete; the information provided is not intended to be advice. ERIKS shall never be liable for damage resulting from the use of the information provided.

| Description | Article |
|--|----------|
| Sub-base VMPAL-AP-14-T35-RV 8034559 | 14164232 |
| Sub-base VMPAL-AP-20 560974 | 14164223 |
| Sub-base VMPAL-AP-20-QS10-1 560991 | 14164277 |
| Sub-base VMPAL-AP-20-QS10-1-T1 561015 | 14164276 |
| Sub-base VMPAL-AP-20-QS10-2 560992 | 14164285 |
| Sub-base VMPAL-AP-20-QS10-2-T1 561016 | 14164284 |
| Sub-base VMPAL-AP-20-QS3/8"-1 561003 | 14164279 |
| Sub-base VMPAL-AP-20-QS3/8"-1-T1 561027 | 14164278 |
| Sub-base VMPAL-AP-20-QS3/8"-2 561004 | 14164287 |
| Sub-base VMPAL-AP-20-QS3/8"-2-T1 561028 | 14164286 |
| Sub-base VMPAL-AP-20-QS5/16"-1 561009 | 14164268 |
| Sub-base VMPAL-AP-20-QS5/16"-1-T1 561033 | 14164267 |
| Sub-base VMPAL-AP-20-QS5/16"-2 561010 | 14164283 |
| Sub-base VMPAL-AP-20-QS5/16"-2-T1 561034 | 14164282 |
| Sub-base VMPAL-AP-20-QS8-1 560997 | 14164266 |
| Sub-base VMPAL-AP-20-QS8-1-T1 561021 | 14164265 |
| Sub-base VMPAL-AP-20-QS8-2 560998 | 14164281 |
| Sub-base VMPAL-AP-20-QS8-2-T1 561022 | 14164280 |
| Sub-base VMPAL-AP-20-RV 8034561 | 14164239 |
| Sub-base VMPAL-AP-20-T1 560976 | 14164222 |
| Sub-base VMPAL-AP-20-T135 560980 | 14164219 |
| Sub-base VMPAL-AP-20-T135-RV 8034564 | 14164236 |
| Sub-base VMPAL-AP-20-T1-RV 8034562 | 14164238 |
| Sub-base VMPAL-AP-20-T35 560978 | 14164221 |
| Sub-base VMPAL-AP-20-T35-RV 8034563 | 14164237 |
| Sub-base VMPAL-AP-4X10 560981 | 12265236 |
| Sub-base VMPAL-AP-4X10-QS1/4"-1 561095 | 14164320 |
| Sub-base VMPAL-AP-4X10-QS1/4"-2 561096 | 14164325 |
| Sub-base VMPAL-AP-4X10-QS4-1 561089 | 14164318 |
| Sub-base VMPAL-AP-4X10-QS4-2 561090 | 14164321 |
| Sub-base VMPAL-AP-4X10-QS6-1 561083 | 14164319 |
| Sub-base VMPAL-AP-4X10-QS6-2 561084 | 14164322 |
| Sub-base VMPAL-AP-4X14 560983 | 14164253 |
| Sub-base VMPAL-AP-4X14-QS1/4"-1 561103 | 14164323 |
| Sub-base VMPAL-AP-4X14-QS1/4"-2 561104 | 14164328 |
| Sub-base VMPAL-AP-4X14-QS5/16"-1 561097 | 14164326 |
| Sub-base VMPAL-AP-4X14-QS5/16"-2 561098 | 14164330 |
| Sub-base VMPAL-AP-4X14-QS6-1 561091 | 14164324 |
| Sub-base VMPAL-AP-4X14-QS6-2 561092 | 14164329 |
| Sub-base VMPAL-AP-4X14-QS8-1 561085 | 14164327 |
| Sub-base VMPAL-AP-4X14-QS8-2 561086 | 14164332 |

Disclaimer: The content of this document has been composed with the utmost care. However, it is possible that certain information changes over time, becomes inaccurate or incomplete. ERIKS does not guarantee that the information provided on this document is up to date, accurate and complete; the information provided is not intended to be advice. ERIKS shall never be liable for damage resulting from the use of the information provided.