



FESTO Pressure sensor SPAU

Characteristics

Series: SPAU

Description	Article
Pressure sensor SPAU-B2R-H-G18FD-L-PNLK-PNVBA-M8U 8001219	8001219-FESTO
Pressure sensor SPAU-B2R-T-R18M-L-PNLK-PNVBA-M8D 8001207	8001207-FESTO
Pressure sensor SPAU-P10R-F-Q4-L-PNLK-PNVBA-M12 8001224	8001224-FESTO
Pressure sensor SPAU-P10R-F-Q6-L-PNLK-PNVBA-M12 8001225	8001225-FESTO
Pressure sensor SPAU-P10R-H-G18FD-L-PNLK-PNVBA-M12U 8001220	8001220-FESTO
Pressure sensor SPAU-P10R-H-G18FD-L-PNLK-PNVBA-M8U 8001221	8001221-FESTO
Pressure sensor SPAU-P10R-H-Q4D-LK-A-M12D 8003350	8003350-FESTO
Pressure sensor SPAU-P10R-H-Q4D-LK-V-M12D 8003349	8003349-FESTO
Pressure sensor SPAU-P10R-H-Q4D-L-PNLK-PNVBA-M12D 8001212	8001212-FESTO
Pressure sensor SPAU-P10R-H-Q4D-L-PNLK-PNVBA-M8D 8001211	8001211-FESTO
Pressure sensor SPAU-P10R-H-T532D-L-PNLK-PNVBA-M12D 8001216	8001216-FESTO
Pressure sensor SPAU-P10R-T-G18M-LK-V-M12D 8003345	8003345-FESTO
Pressure sensor SPAU-P10R-T-G18M-L-PNLK-PNVBA-M12D 8001204	8001204-FESTO
Pressure sensor SPAU-P10R-T-G18M-L-PNLK-PNVBA-M8D 8001201	8001201-FESTO
Pressure sensor SPAU-P10R-T-N18M-L-PNLK-PNVBA-M12D 8001205	8001205-FESTO
Pressure sensor SPAU-P10R-T-N18M-L-PNLK-PNVBA-M8D 8001202	8001202-FESTO
Pressure sensor SPAU-P10R-T-R14M-L-PNLK-PNVBA-M12D 8001208	8001208-FESTO
Pressure sensor SPAU-P10R-T-R14M-L-PNLK-PNVBA-M8D 8001209	8001209-FESTO
Pressure sensor SPAU-P10R-T-R18M-L-PNLK-PNVBA-M12D 8001206	8001206-FESTO
Pressure sensor SPAU-P10R-T-R18M-L-PNLK-PNVBA-M8D 8001203	8001203-FESTO
Pressure sensor SPAU-P10R-W-G18FD-L-PNLK-PNVBA-M12U 8001230	8001230-FESTO
Pressure sensor SPAU-P10R-W-G18FD-L-PNLK-PNVBA-M8U 8001231	8001231-FESTO
Pressure sensor SPAU-P10R-W-Q4D-L-PNLK-PNVBA-M12D 8001236	8001236-FESTO
Pressure sensor SPAU-P10R-W-Q4D-L-PNLK-PNVBA-M8D 8001237	8001237-FESTO
Pressure sensor SPAU-P16R-T-R14M-L-PNLK-PNVBA-M8D 8001210	8001210-FESTO
Pressure sensor SPAU-P2R-W-G18FD-L-PNLK-PNVBA-M8U 8001232	8001232-FESTO
Pressure sensor SPAU-V1R-F-Q4-L-PNLK-PNVBA-M12 8001227	8001227-FESTO
Pressure sensor SPAU-V1R-F-Q6-L-PNLK-PNVBA-M12 8001228	8001228-FESTO
Pressure sensor SPAU-V1R-F-T532-L-PNLK-PNVBA-M12 8001229	8001229-FESTO
Pressure sensor SPAU-V1R-H-G18FD-L-PNLK-PNVBA-M8U 8001223	8001223-FESTO
Pressure sensor SPAU-V1R-H-Q4D-LK-A-M12D 8003352	SPAU-V1R-H-Q4D-LK-A-M12D
Pressure sensor SPAU-V1R-H-Q4D-L-PNLK-PNVBA-M12D 8001214	8001214-FESTO
Pressure sensor SPAU-V1R-H-Q4D-L-PNLK-PNVBA-M8D 8001213	8001213-FESTO
Pressure sensor SPAU-V1R-T-G18M-LK-A-M12D 8003348	8003348-FESTO
Pressure sensor SPAU-V1R-T-G18M-LK-V-M12D 8003347	8003347-FESTO
Pressure sensor SPAU-V1R-W-G18FD-L-PNLK-PNVBA-M12U 8001234	8001234-FESTO
Pressure sensor SPAU-V1R-W-G18FD-L-PNLK-PNVBA-M8U 8001235	8001235-FESTO
Pressure sensor SPAU-V1R-W-Q4D-L-PNLK-PNVBA-M12D 8001238	8001238-FESTO
Pressure sensor SPAU-V1R-W-Q4D-L-PNLK-PNVBA-M8D 8001239	8001239-FESTO

Disclaimer: The content of this document has been composed with the utmost care. However, it is possible that certain information changes over time, becomes inaccurate or incomplete. ERIKS does not guarantee that the information provided on this document is up to date, accurate and complete; the information provided is not intended to be advice. ERIKS shall never be liable for damage resulting from the use of the information provided.