


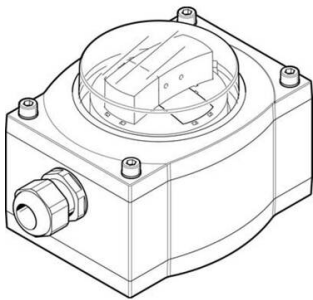

# FESTO Sensor box SRAP

## Characteristics

Series: SRAP

| Description                                      | Article  |
|--------------------------------------------------|----------|
| Sensor box SRAP-M-CA1-270-1-A-T2P20 570527       | 12266365 |
| Sensor box SRAP-M-CA1-270-1-A-T2P20-EX2 570528   | 12267908 |
| Sensor box SRAP-M-CA1-BB270-1-A-TP20 568236      | 12267886 |
| Sensor box SRAP-M-CA1-BB270-1-A-TP20-EX2 568237  | 12267887 |
| Sensor box SRAP-M-CA1-GR270-1-A-T2P20 568246     | 12267894 |
| Sensor box SRAP-M-CA1-GR270-1-A-T2P20-EX2 568247 | 12267895 |
| Sensor box SRAP-M-CA1-GR270-1-A-TM20 568238      | 12267888 |
| Sensor box SRAP-M-CA1-GR270-1-A-TP20 568239      | 12267889 |
| Sensor box SRAP-M-CA1-GR270-1-A-TP20-EX2 568241  | 12267890 |
| Sensor box SRAP-M-CA1-YB270-1-A-TM20 568242      | 12267891 |
| Sensor box SRAP-M-CA1-YB270-1-A-TP20 568243      | 12267892 |
| Sensor box SRAP-M-CA1-YB270-1-A-TP20-EX2 568245  | 12267893 |

Disclaimer: The content of this document has been composed with the utmost care. However, it is possible that certain information changes over time, becomes inaccurate or incomplete. ERIKS does not guarantee that the information provided on this document is up to date, accurate and complete; the information provided is not intended to be advice. ERIKS shall never be liable for damage resulting from the use of the information provided.