## **NEDERMAN Accessories for suction arm ORIGINAL**



When using external power 24 V and no Nederman fan starter, a relay (part no. 14374307) must be installed between the spotlight and the switch.

Description	Article
Switch lights / fan 24 V, 20 W, hood Original	23337982
Nederman muursteun voor arm 4&5m (type - nex)	23337675
Flexible hose pvc l=6m 160mm	23337644
Hose 160mm - 4m	23337648

Disclaimer: The content of this document has been composed with the utmost care. However, it is possible that certain information changes over time, becomes inaccurate or incomplete. ERIKS does not guarantee that the information provided on this document is up to date, accurate and complete; the information provided is not intended to be advice. ERIKS shall never be liable for damage resulting from the use of the information provided.

PR\_EC001274\_0019\_MVB\_EN\_20.05.2024