



TELEMECANIQUE Illuminated heads for spring return pushbuttons

Description	Article
Double headed Push Button Illuminated Green "I" / Red "O" 1 Flush/1 Projecting	TQZB4BW7L3741
Double headed Push Button Illuminated Green and Red flush Spring Return Unmarked	TQZB4BW7A3740
Light block assembly BA 9s No Bulb included 250V 2NO	TQZB4BW063
Push Button Illuminated BA 9s Clear Flush 22mm Spring Return Plain Lens	TQZB4BW37
Push Button Illuminated LED Blue Flush 22mm Spring Return Plain Lens	TQZB4BW163
Push Button Illuminated LED Blue Illuminated ring 22mm Spring Return Unmarked	TQZB4BW963
Push Button Illuminated LED Green 22mm Spring Return Unmarked	TQZB4BW433
Push Button Illuminated LED Green Flush 22mm Spring Return Grooved Lens	TQZB4BW333S
Push Button Illuminated LED Green Flush 22mm Spring Return Unmarked	TQZB4BW533
Push Button Illuminated LED Green Projecting 22mm Spring Return Plain Lens	TQZB4BW133
Push Button Illuminated LED Orange Flush 22mm Spring Return Plain Lens	TQZB4BW153
Push Button Illuminated LED Red 22mm Push-Pull Reset Unmarked	TQZB4BW643
Push Button Illuminated LED Red Flush 22mm Spring Return Grooved Lens	TQZB4BW343S
Push Button Illuminated LED White Flush 22mm Spring Return Grooved Lens	TQZB4BW313S
Harmony® Style 4 Illuminated Pushbutton Body Assembly ZB4BW0B15	TQZB4BW0B15
Harmony® Style 4 Illuminated Pushbutton Body Assembly ZB4BW0B11	TQZB4BW0B11
Harmony® Style 4 Spring Return Illuminated Pushbutton Head ZB4BW35	TQZB4BW35
Harmony® Style 4 Spring Return Illuminated Pushbutton Head ZB4BW343	TQZB4BW343
Harmony® Style 4 Spring Return Illuminated Pushbutton Head ZB4BW333	TQZB4BW333
Harmony® Style 4 Spring Return Illuminated Pushbutton Head ZB4BW36	TQZB4BW36
Harmony® Style 4 Spring Return Illuminated Pushbutton Head ZB4BW363	TQZB4BW363
Harmony® Style 4 Spring Return Illuminated Pushbutton Head ZB4BW33	TQZB4BW33
Harmony® Style 4 Illuminated Pushbutton Body Assembly ZB4BW061	TQZB4BW061
Harmony® Style 4 Illuminated Pushbutton Body Assembly ZB4BW051	TQZB4BW051
Harmony® Style 4 Illuminated Pushbutton Body Assembly ZB4BW0G11	TQZB4BW0G11
Harmony® Style 4 Spring Return Illuminated Pushbutton Head ZB4BW31	TQZB4BW31
Harmony® Style 4 Spring Return Illuminated Pushbutton Head ZB4BW353	TQZB4BW353
Harmony® Style 4 Spring Return Illuminated Pushbutton Head ZB4BW313	TQZB4BW313
Harmony® Style 4 Illuminated Pushbutton Body Assembly ZB4BW0M31	TQZB4BW0M31
Harmony® Style 4 Illuminated Pushbutton Body Assembly ZB4BW062	TQZB4BW062
Harmony® Style 4 Spring Return Illuminated Pushbutton Head ZB4BW34	TQZB4BW34
Harmony® Style 4 Illuminated Pushbutton Body Assembly ZB4BW0M11	TQZB4BW0M11
Harmony® Style 4 Illuminated Pushbutton Body Assembly ZB4BW065	TQZB4BW065

Disclaimer: The content of this document has been composed with the utmost care. However, it is possible that certain information changes over time, becomes inaccurate or incomplete. ERIKS does not guarantee that the information provided on this document is up to date, accurate and complete; the information provided is not intended to be advice. ERIKS shall never be liable for damage resulting from the use of the information provided.