



FESTO Flow sensor SFAW

Characteristics

Series: SFAW

Description	Article
Flow sensor SFAW-100-TG1-E-PNLK-PNVBA-M12 8036877	8036877-FESTO
Flow sensor SFAW-100-TG34-E-PNLK-PNVBA-M12 8036875	8036875-FESTO
Flow sensor SFAW-100T-TG1-E-PNLK-PNVBA-M12 8036878	8036878-FESTO
Flow sensor SFAW-100T-TG34-E-PNLK-PNVBA-M12 8036876	8036876-FESTO
Flow sensor SFAW-100T-X-E-PNLK-PNVBA-M12 8036890	8036890-FESTO
Flow sensor SFAW-100-X-E-PNLK-PNVBA-M12 8036889	8036889-FESTO
Flow sensor SFAW-32-TG12-E-PNLK-PNVBA-M12 8036871	8036871-FESTO
Flow sensor SFAW-32-TG34-E-PNLK-PNVBA-M12 8036873	8036873-FESTO
Flow sensor SFAW-32T-TG12-E-PNLK-PNVBA-M12 8036872	8036872-FESTO
Flow sensor SFAW-32T-TG34-E-PNLK-PNVBA-M12 8036874	8036874-FESTO
Flow sensor SFAW-32T-X-E-PNLK-PNVBA-M12 8036888	8036888-FESTO
Flow sensor SFAW-32-X-E-PNLK-PNVBA-M12 8036887	8036887-FESTO

Disclaimer: The content of this document has been composed with the utmost care. However, it is possible that certain information changes over time, becomes inaccurate or incomplete. ERIKS does not guarantee that the information provided on this document is up to date, accurate and complete; the information provided is not intended to be advice. ERIKS shall never be liable for damage resulting from the use of the information provided.